

Servicing the Rookie tennis ball machine requires removing the aluminum housing. Follow these steps to remove the housing.

Remove the eight Phillips head screws (two on each side) from the lower edge of the housing.



Lay the ball machine flat with the ball exit hole facing down. Then pull the base plate out approximately five inches.



Disconnect the white Molex connector. The housing can now be removed.

