


## Ball Feed Motor Replacement Instructions


With the housing removed, unfasten the two Phillips head screws and lift the carousel off.

Disconnect the ball feed motor from the control board and the power switch.

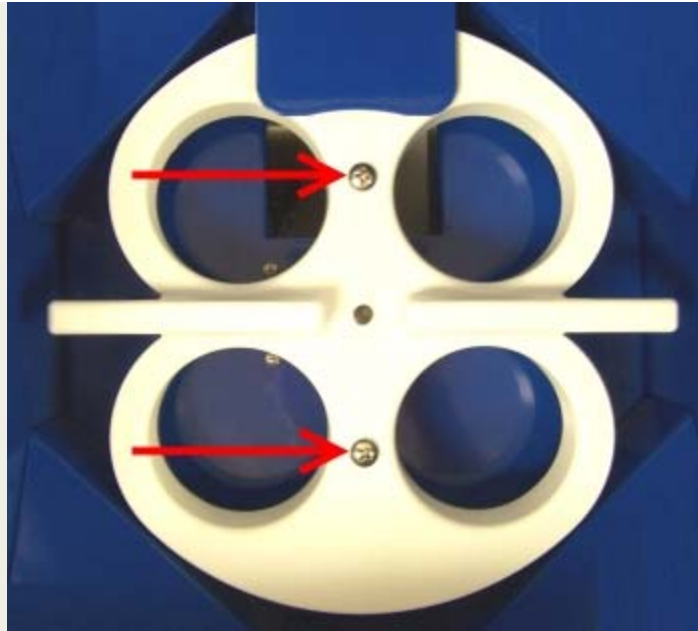

Using a 1/8" Allen wrench, loosen the set screw and remove the T bracket and spacer.

Unfasten the four Phillips head screws and remove the motor.

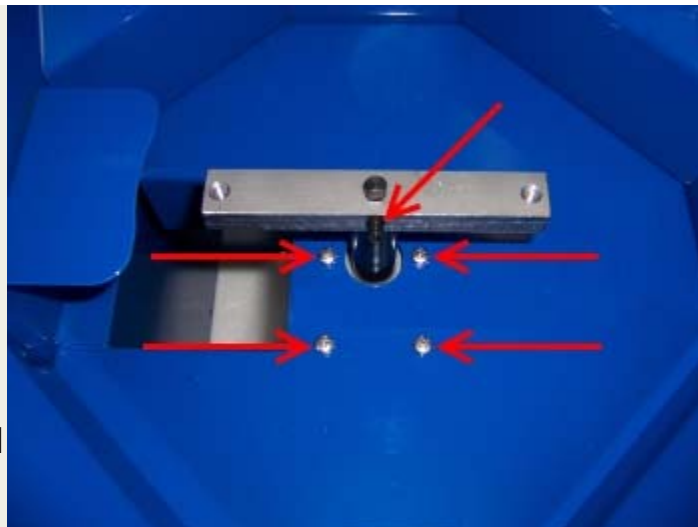

Follow these directions in reverse order to install the new motor.