

Battery Replacement Instructions

Use a 3/8" wrench to remove the battery bracket nut. Disconnect the two battery wires and lift the battery bracket over the threaded post.

When installing the new battery, insert the grooved end of the battery bracket into the slot on the base plate. Slide the bracket over until it rests against the ball chute and insert the threaded post through the hole in the bracket.

