

## Delivery Motor Replacement Instructions

With the battery removed, use a 5/32" Allen wrench to loosen the delivery wheel screw. Slide the delivery wheel off the motor shaft.



Using a 3/8" wrench, remove the two delivery motor nuts. Cut the four cable ties that secure the motor harness to the base.

Follow these steps in reverse order to install the new motor.

