

Electronic Board Replacement Instructions

With the housing removed, disconnect the ball feed motor from the electronic board.

Unfasten the four Phillips head screws and remove the electronic board.

Do not overtighten the four Phillips head screws when reattaching the electronic board.

