

Servicing the SAM Portable ball machines requires removing the base housing. To access the inside of the machine follow these two steps:



Using a 5/32" Allen wrench, remove the four Allen head screws that hold the base housing in place.



The base housing will open like a clam shell and rest on the transport handle.