


Servicing the iSAM usually requires removing the base plate. To access the inside of the iSAM follow these two steps:



Remove all 11 Phillips head screws along the perimeter of the base.

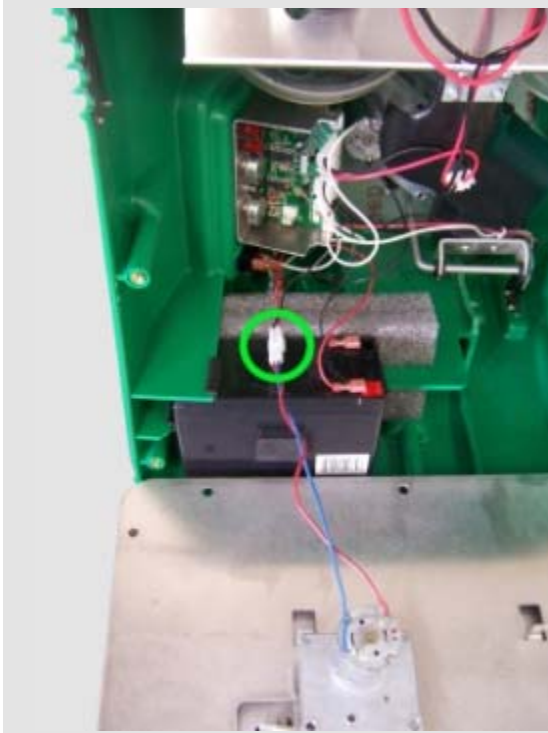

Disconnect the oscillation motor and place the base plate aside.