

## SAM Ball Feed Motor Replacement Instructions

Remove the two Phillips head screws (older machines will have four screws) and remove the white ball carousel.



Using a 1/8" Allen wrench, loosen the two Allen head screws and remove the T bracket and washers. Note the position of the spacers. [Remove the base plate](#), then unplug the feed motor from the control board. Remove the six Phillips head screws holding the motor in place. Follow these instructions in reverse order to install

