


SAM P4 Control Board Instructions

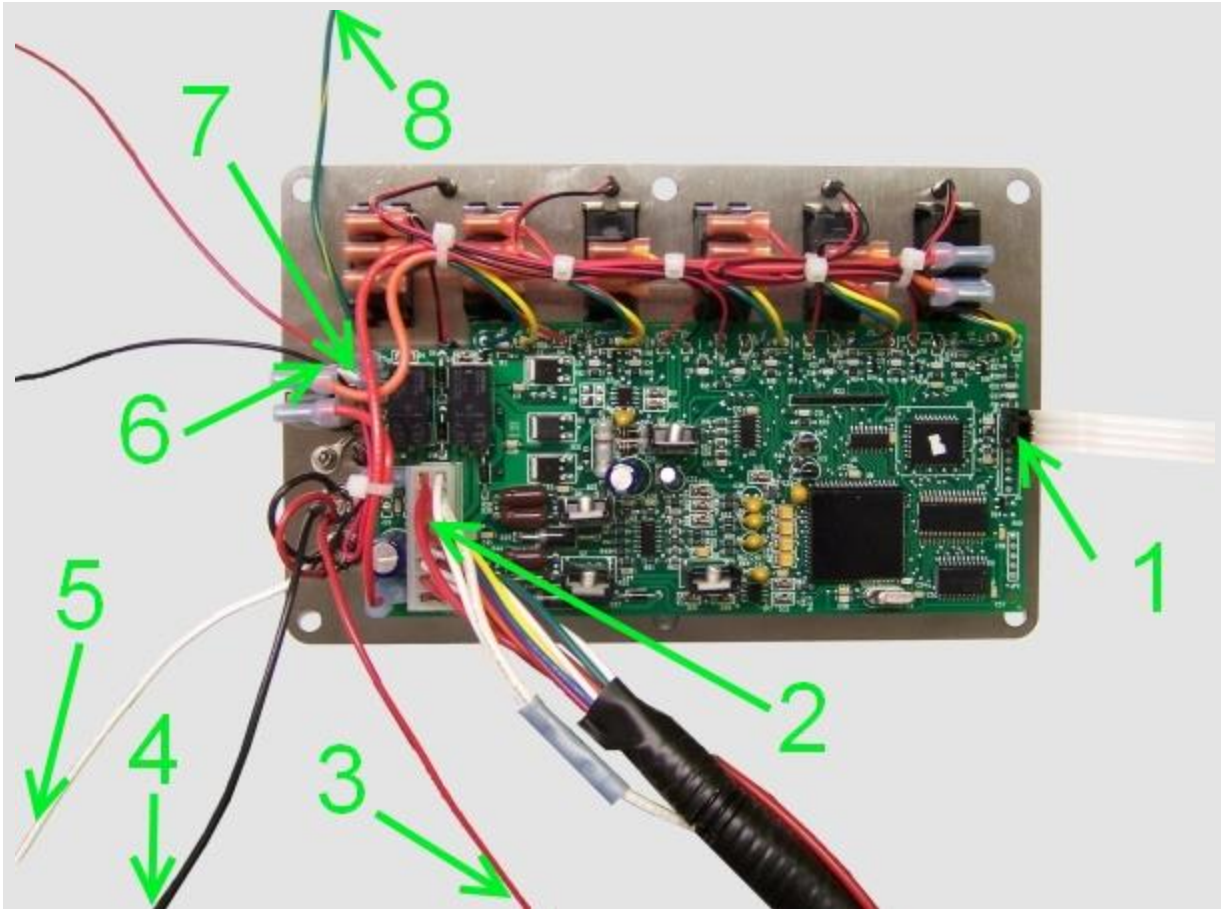

Numbers 1, 2, 6, and 7 must be disconnected from the control board.

Numbers 3, 4, 5, and 8 run from the control board and must be disconnected from inside the machine.

1. Receiver cable disconnects from the control board.
 2. Wire harness disconnects from the control board.
 3. Red wire disconnects from the wire harness **and** from the red battery cable.
 4. Black wire disconnects from the black battery cable.
 5. White wire disconnects from wire harness.
 6. Black wire disconnects from the control board.
 7. Red wire disconnects from the control board.
 8. Green grounding wire disconnects from the aluminum ball tray.
- [Removing the base housing](#) might be helpful for disconnecting numbers 3, 4, 5, and 8.
 - Note: Older machines with the charging receptacles not located on the control board will not have numbers 3, 4, or 5.

