


SAM Portable Battery Replacement Instructions



[Open the Base Housing.](#) Undo the two Phillips head screws and remove the battery strap. Disconnect the four wires from the battery terminals and replace the batteries.

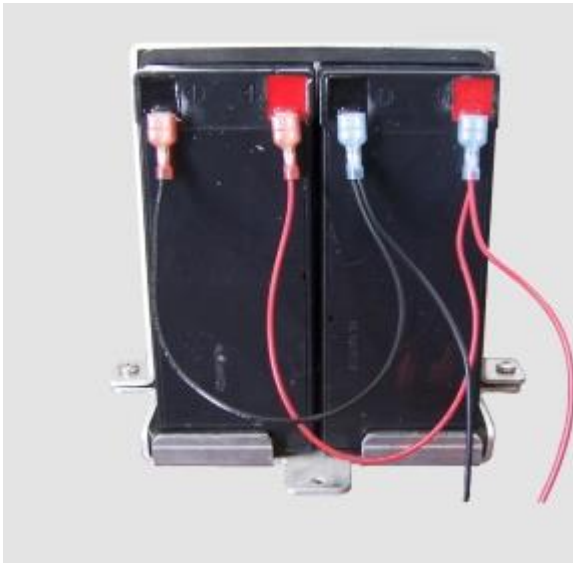

You must reconnect the red wires to the red terminals and the black wires to the black terminals. **DO NOT REVERSE POLARITY.**