

## iSAM Battery Replacement Instructions



Remove the Base Plate,

then disconnect the two wires from the battery terminals. When installing a battery you must reconnect the red wire to the red terminal and the black wire to the black terminal. DO NOT REVERSE POLARITY.