

## iSAM Control Board Replacement Instructions



[Remove the the base plate](#), then disconnect the wire harness, ball feed motor, and delivery motors from the electronic control board.



Use a small flathead screwdriver to loosen the set screws on each knob. Remove each knob and then remove the two Phillips screws holding the board in place. The control board is now ready for removal. Follow these instructions in reverse order to install the electronics.